


RECOMMENDED INSTALLATION GUIDELINES

Acrylic Wall Hung Sink (Models BS2018, SB2418, SB3018 & SB3618)

To help insure that the installation process will proceed smoothly, please read these instructions carefully before you begin.

NOTE: PROVIDE SUITABLE WOOD SUPPORT BEHIND FINISHED WALL OR USE SUITABLE WALL ANCHORS WHEN INSTALLING THE SINKS HANGER BRACKET. OBSERVE LOCAL PLUMBING AND BUILDING CODES.

STEP 1: To determine placement of the sinks hanger bracket, first determine the desired finished height of the top edge of the sinks backsplash. Now, subtract 2 1/2" from the desired finish height of the backsplash to determine the hanger brackets placement height. Example, if you desire the top edge of the sinks backsplash to be located at a finished height of 42", the line marked in *step 2* would be placed at 39 1/2" from the finished floor.

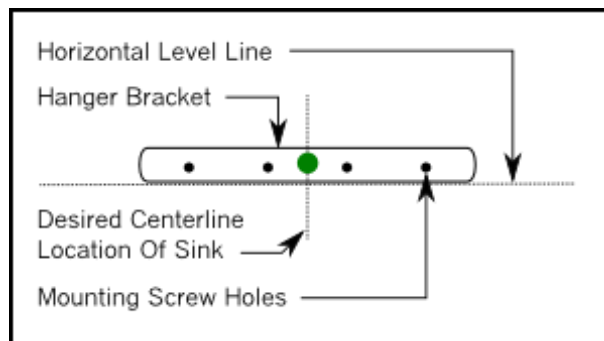

STEP 2: Mark a horizontal level line on the wall at the height determined in *step 1*. Now make a mark along this horizontal line at the desired centerline location of the sink.

STEP 3: Position the bottom of hanger bracket with the green dot facing out along the horizontal level line made in *step 2*. Center the mounting bracket with the desired centerline location of the sink and mark all hanger bracket mounting screw hole locations using a pencil.

STEP 4: Drill pilot holes in the hanger screw locations marked in *step 3*.

STEP 5: Attach the hanger bracket to wall using suitable anchors or screws (not included) being sure to use a fastener at each mounting bracket hole location.

STEP 6: Temporarily mount the sink and position and level the deck. Mark bottom anchor screw holes with a pencil. Remove sink and drill pilot holes for anchor screws.

STEP 7: Following manufacturer's instructions, install faucet and drain assembly. (Not included).

STEP 8: Install sink making sure that the metal tabs located on the sinks backsplash engage securely into the hanger bracket. Center and level sink then install suitable anchor screws (not included).

STEP 9: Connect hot and cold supply lines to the shut-off valves. Apply a bead of caulk around the outer edge of sink which contacts the wall for a seamless finish.

